

POLARIS RZR 2022+ (PRO-R / TURBO-R) A PILLAR MOUNTING KIT FOR RP SERIES

FITTING INSTRUCTIONS





TECHNICAL SUPPORT

+1 520 468 2633 sales@triple-r-lights.com

WHAT'S REQUIRED

- 2x RP Flood / Spot / Hyperspot
- 1x Two-Lamp Wiring Kit
- 1x Mounting Kit (VIFK-RZR-01K)

DIFFICULTY LEVEL



TOOLS REQUIRED






PRE-INSTALLATION CHECKS

Ensure battery is disconnected.

INSTALLATION GUIDE: TURBO-R

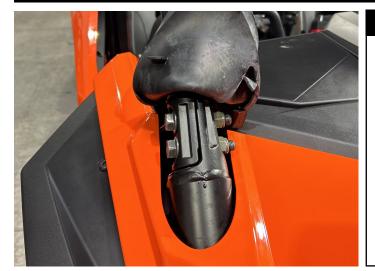

STEP 1

Pull up the rubber trim on the A Pillar to expose the bolts behind.



STEP 2

Remove the bolts and screws.

STEP 3

Install the brackets using the nuts, bolts and washers included with the mounting kit.









STEP 4

Pull the A pillar rubber trim back down.

STEP 5

Install the lamps to the mounts using the hardware included with the lamps.





INSTALLATION GUIDE: PRO-R



Pull up the rubber trim on the A Pillar and remove the bolts and screws.

STEP 2

Install the brackets using the nuts, bolts and washers included with the mounting kit.



STEP 3

Install the lamps to the mounts using the hardware included with the lamps. Then, pull the A pillar rubber trim back down.

